

# Miniflo-L<sup>ä</sup>

## Digital Fuel Management System

RS-232 output format  
with interface to LORAN-C and GPS receivers



## **OPERATING MANUAL** Single and Twin Engine Indicators

For P/N: 91204XT-D

**Shadin Co., Inc.**

## **ADJUSTING THE INDICATED FUEL QUANTITY**

### **TANKS FULL**

- Move the FULL/ADD toggle switch to the FULL position and hold.
- Press the ENTER/TEST button.
- Release the FULL/ADD toggle switch.

### **TANKS PARTIALLY FULL**

- Use fuel dipstick and chart to determine actual fuel quantity.
- Move REM/USED toggle switch to REM position to display indicated fuel quantity.

#### **To Increase Indicated Fuel Quantity**

- Move REM/USED toggle switch to REM position and hold.
- Press and hold ENTER/TEST button until actual fuel quantity is indicated, then release button; or press ENTER/TEST button repeatedly to increase fuel quantity in .1 gallon increments.
- Release the REM/USED toggle switch.

#### **To Decrease Indicated Fuel Quantity**

- Move REM/USED toggle switch to USED position and hold.
- Press and hold ENTER/TEST button until actual fuel quantity is indicated, then release button; or press ENTER/TEST button repeatedly to decrease fuel quantity in .1 gallon increments.
- Release the REM/USED toggle switch.

**To verify, move the REM/USED toggle switch to the REM position. Indicated fuel quantity should match actual fuel quantity.**